

Follow these directions carefully and **use safety goggles**. There are no user serviceable electronic parts inside. You should only open the case to replace the fan. Damage to the circuit board caused by prying the case open is not covered by warranty. **Never, under any circumstances insert anything into the slots that are covered by the labels.**

To Replace the Mamba Max Pro Fan:

1. Clip the shroud mounting tabs that are above the switch and receiver wires with wire cutters.
2. Hold Mamba Max Pro such that the side with the three motor lead connectors is facing up.
3. Gently lift the top of the fan shroud. **Note: You will have to tilt the top of the fan shroud 90 degrees to remove the fan shroud completely.**
4. Lift the fan shroud straight up after you have tilted the fan shroud 90 degrees.
5. To remove the fan you will need an X-acto knife or a small thin pointed knife. Place the tip of the knife under the white fan plug about 1/18". Gently tilt the knife handle down which will apply pressure to the bottom of the plug with the tip of your knife. The plug will pop out with ease.
6. Plug the new fan into the port and put on new fan shroud w/ fan.
7. Insert the lip next to the top of the case and the heat sink. Lower the fan shroud 90 degrees and insert tabs into the side of the Mamba Max Pro.

