



SIDEWINDER 8TH ERROR CODES

GREEN/YELLOW FLASHING	ESC input voltage is below the operating limit (drained battery)
RED/YELLOW/GREEN FLASHING	Sudden and extreme rise in temperature (possibly over-gear)
RED/YELLOW FLASHING	ESC temperature above the operating limit (possibly over-gear)
RED/GREEN FLASHING	BEC temperature above the operating limit (possibly damaged servo)
RED/YELLOW/GREEN FLASHING AND BEEPING	ESC is not detecting a valid signal from the receiver